

INSTRUCTION

DFB SERIES

Industrial Sewing Machines

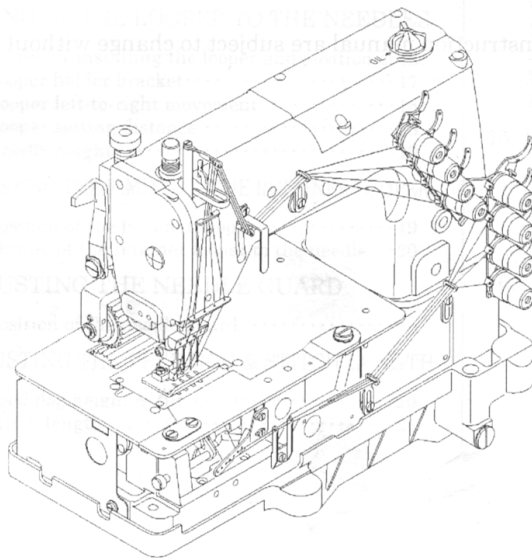

DFB1404P, PMD
DFB1412P, PQ, PS
DFB1412PSM, PTV
DFB1012P, PSM

Third edition : January 1998

No. 980004

KANSAI
SPECIAL®


CONTENTS

1. SPECIFICATIONS	
1-1 Stitch type	1
1-2 Model	1
2. NEEDLES & THREADING THE MACHINE	
2-1 Needles	1
2-2 Replacing the needle	1
2-3 To thread the machine	2
3. MACHINE SPEED	
3-1 Machine speed & direction in which the machine pulley runs	10
3-2 Motor & belt	10
4. LUBRICATION	
4-1 Oil	11
4-2 To fill the machine with oil	11
4-3 Replacing the oil and the filter element	11
5. SEWING MACHINE INSTALLATION	
5-1 Cutting the machine table	12
5-2 How to install the machine	17
6. TIMING OF THE LOOPER TO THE NEEDLES	
6-1 Angle for installing the looper and position of the looper holder bracket	17
6-2 Looper left-to-right movement	18
6-3 Looper setting distance	18
6-4 Needle height	19
7. ADJUSTING THE TIMING OF THE RETAINER LOOPER	
7-1 Position of the retainer looper	19
7-2 Timing of the retainer looper to the needle	20
8. ADJUSTING THE NEEDLE GUARD	
8-1 Position of the needle guard	20
9. ADJUSTING THE FEED DOG & STITCH LENGTH	
9-1 Feed dog height & tilt	20
9-2 Stitch length	21
10. ADJUSTING THE PRESSER FOOT	
10-1 Presser foot pressure	21
10-2 Position of the presser foot	22
11. ADJUSTING THE REAR PULLER DEVICE	
11-1 Manual lever	22
11-2 To adjust the puller pressure	22
11-3 Adjusting the feeding amount of the rear puller	22
12. ADJUSTING THE FRONT PULLER DEVICE	
12-1 To insert elastic and adjust the feeding amount of the front puller	23
13. ADJUSTING THE STITCH FORMATION	
13-1 Thread tension adjustment	23
13-2 Position of the needle thread eyelets	23
13-3 Adjusting the needle thread guard	24
13-4 Position and timing of the looper thread eyelet	24
14. PSM MECHANISM	
14-1 Types of cams	24
14-2 Producing decorative stitches	25
14-3 Replacing the cams	27
14-4 Timing of spreaders	27
14-5 Adjusting the spreaders	28
15. PTV MECHANISM	
15-1 Disassembling and reassembling the binder	28
15-2 Adjusting the binder up and down	29
15-3 Position of the upper and lower fingers of the binder	29
16. CLEANING THE MACHINE	29

【1】 SPECIFICATIONS

1-1 Stitch type

JIS401 double chainstitch machines

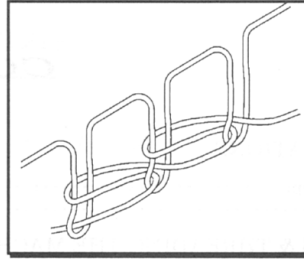

1-2 Model

Model	DFB1404P,PL,PMD	DFB1406P,PL	DFB1412P,PL
No. of needles	2~4	5~6	7~12
No. of threads	4 needle threads	6 needle threads	12 needle threads
	4 looper threads	6 looper threads	12 looper threads
Type of tension set	Mounted type	Separate type	Separate type
Puller width	55mm	79mm	79mm
Minimum gauge width	4.76mm (3/16 inch)		
Maximum gauge width	38.1mm (1-1/2 inch)		70mm

【2】 NEEDLES & THREADING THE MACHINE

2-1 Needles

UO113GS of Schmetz or Organ

Select the proper needle for the fabric and thread.

< Needles and needle size >


Schmetz UY113GS	Nm75	Nm80	Nm90	Nm100
Organ UO113GS	#11	#12	#14	#16

2-2 Replacing the needle

When replacing the needle, check the needle carefully to see that the scarf is turned to the left of the machine (see the illustration).

< Note >

When replacing the needle, be sure to turn off the machine. A clutch motor continues running for a while after the machine is turned off. Therefore keep on pressing the pedal until the machine stops.

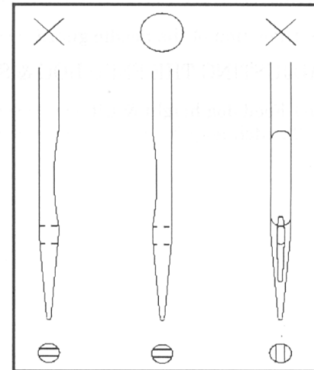

2-3 To thread the machine

Thread the machine correctly by referring to pages 3 to 9.


Incorrect threading may cause skip stitching, thread breakage and/or uneven stitch formation. When threading the looper, tilt the looper holder toward the front of the machine using the looper drawing bar.

■ To tilt the looper toward the front


1. Bring needle bar A to the top of its stroke.
2. Pay out the needle thread from the spool by pressing a finger down on needle threads B.
3. Pull looper drawing bar knob C out to the left so that the looper holder is tilted toward the front of the machine.
4. After the machine is threaded, replace the looper by pressing looper holder D into the machine until it clicks.

< Note >


The looper pops out of the machine as soon as knob C is pulled, so do not bring your fingers close to the looper.

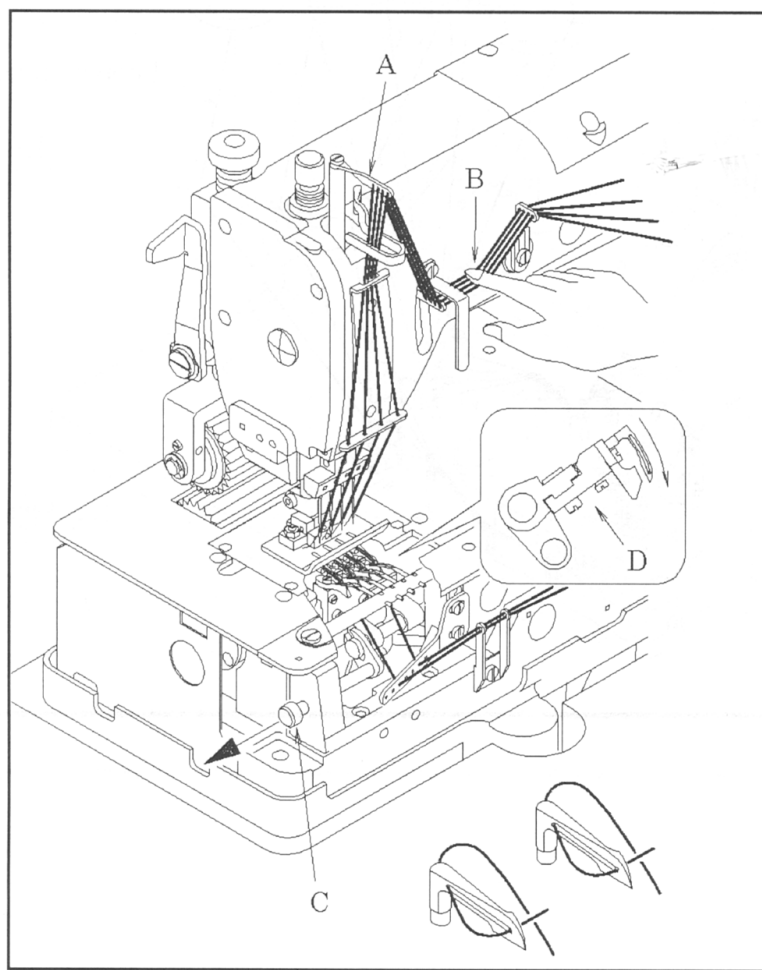


■ Threading diagram for DFB1404

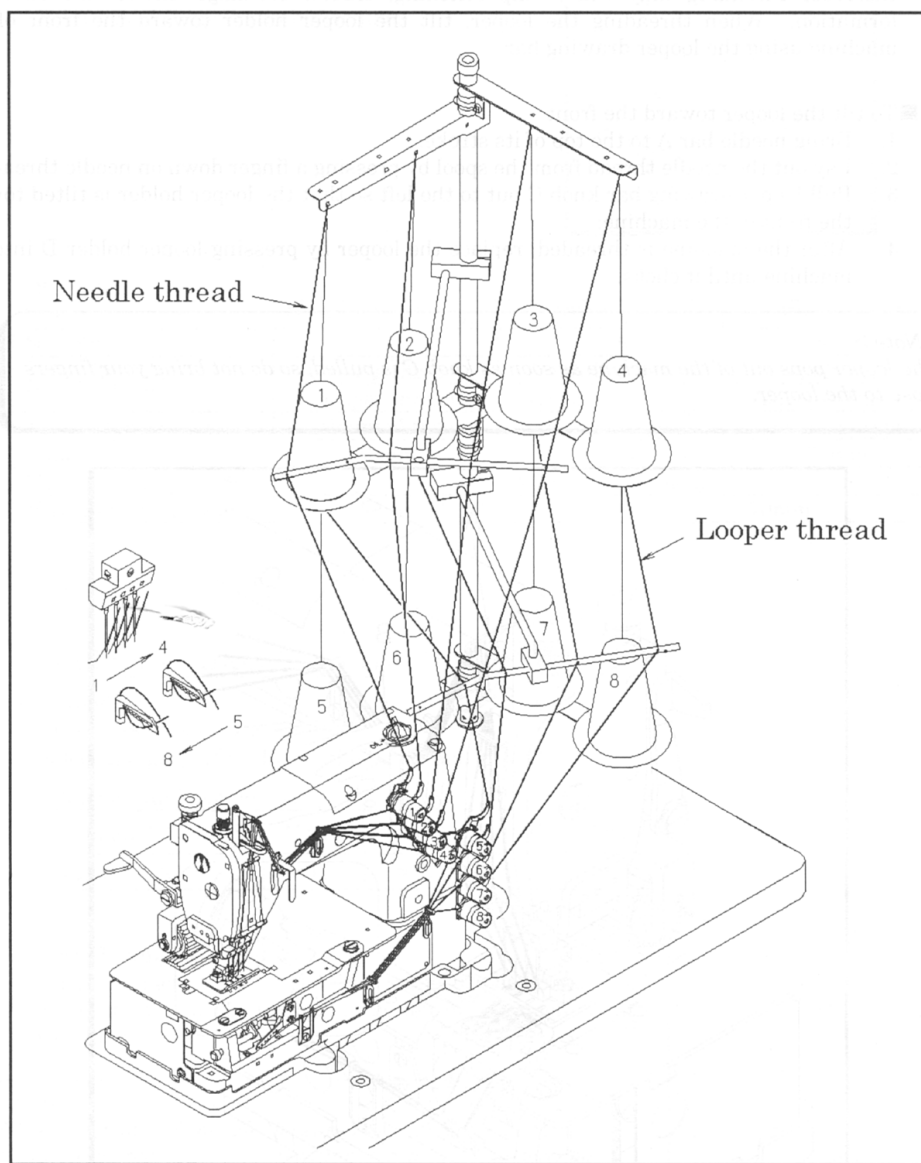


■ Threading diagram for DFB1406

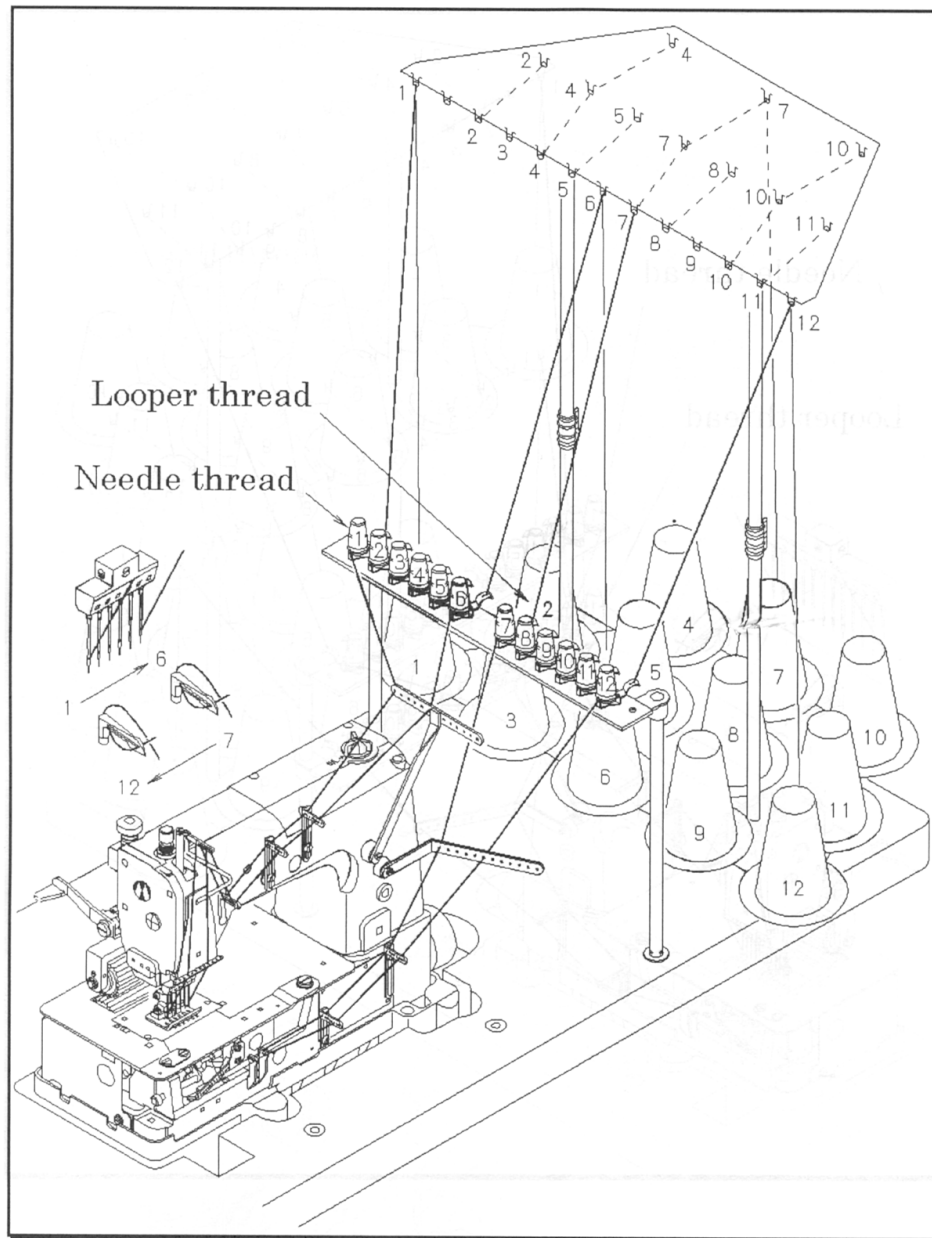


■ Threading diagram for DFB1412

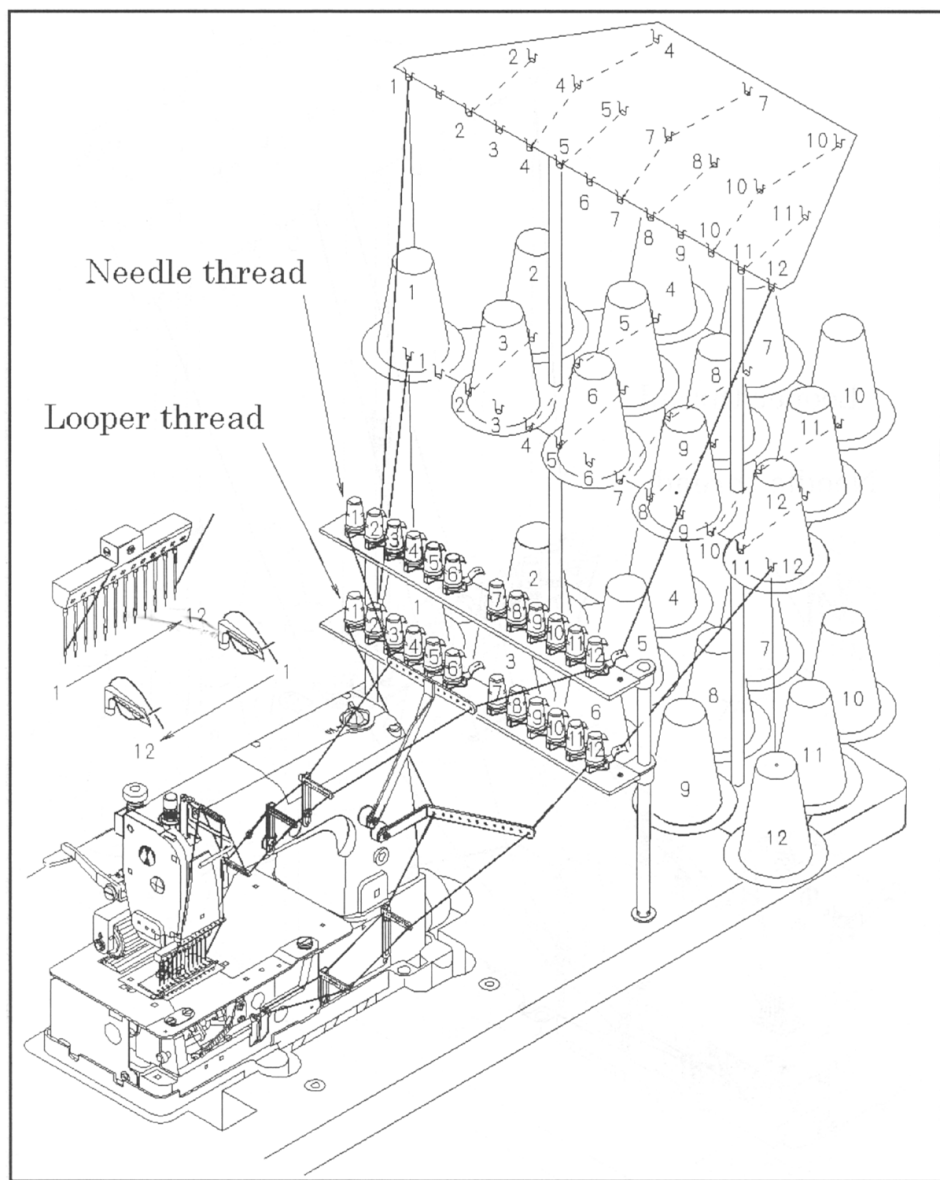


■ Threading diagram for DFB1412PSM

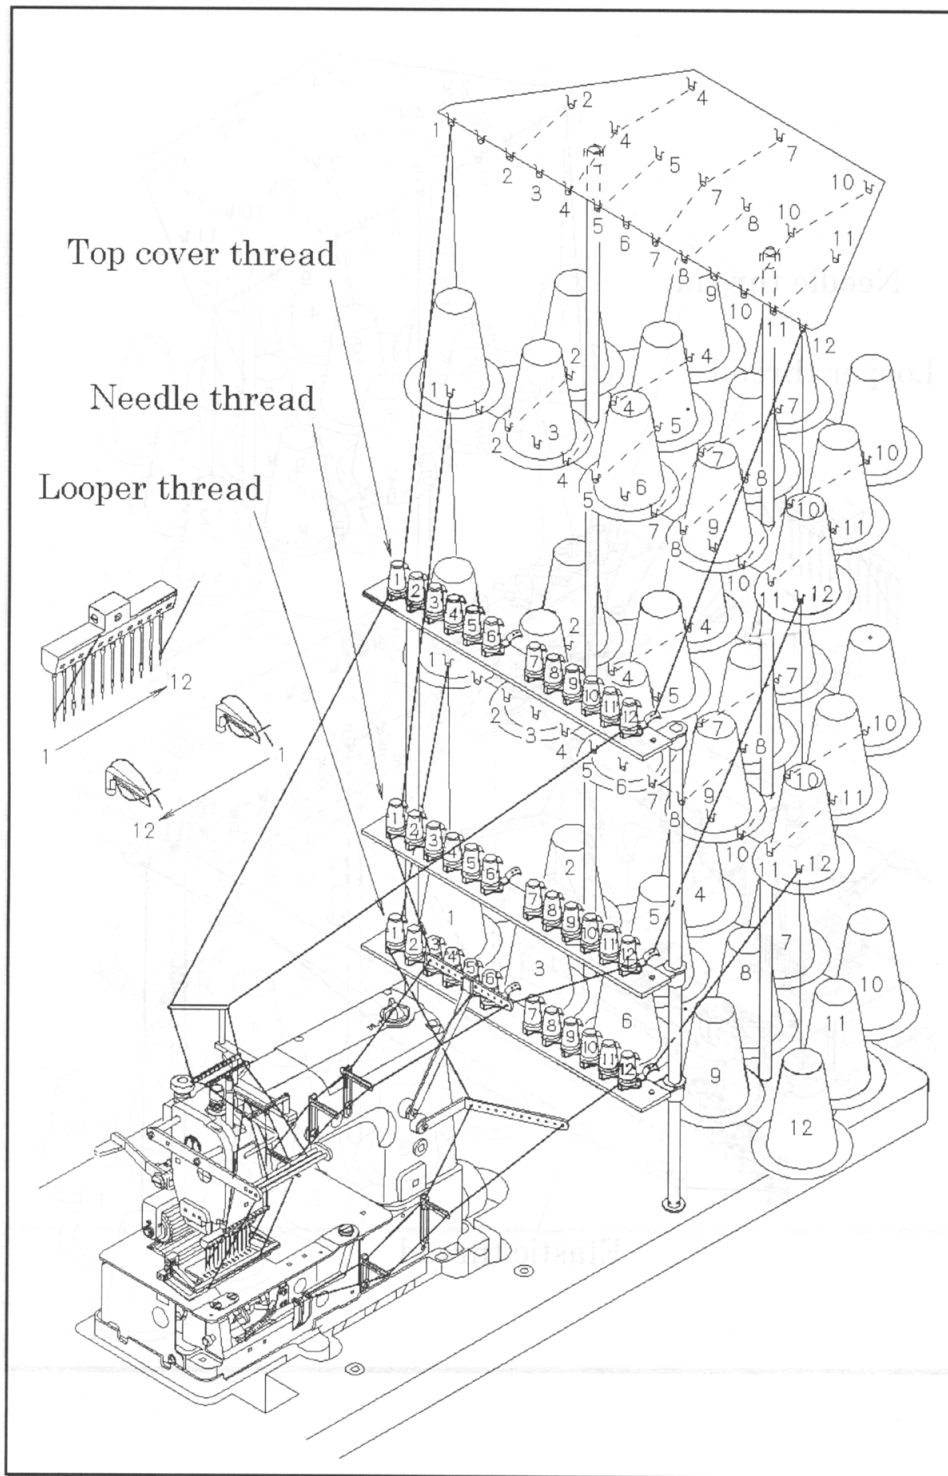


■ Threading diagram for DFB1412PQ

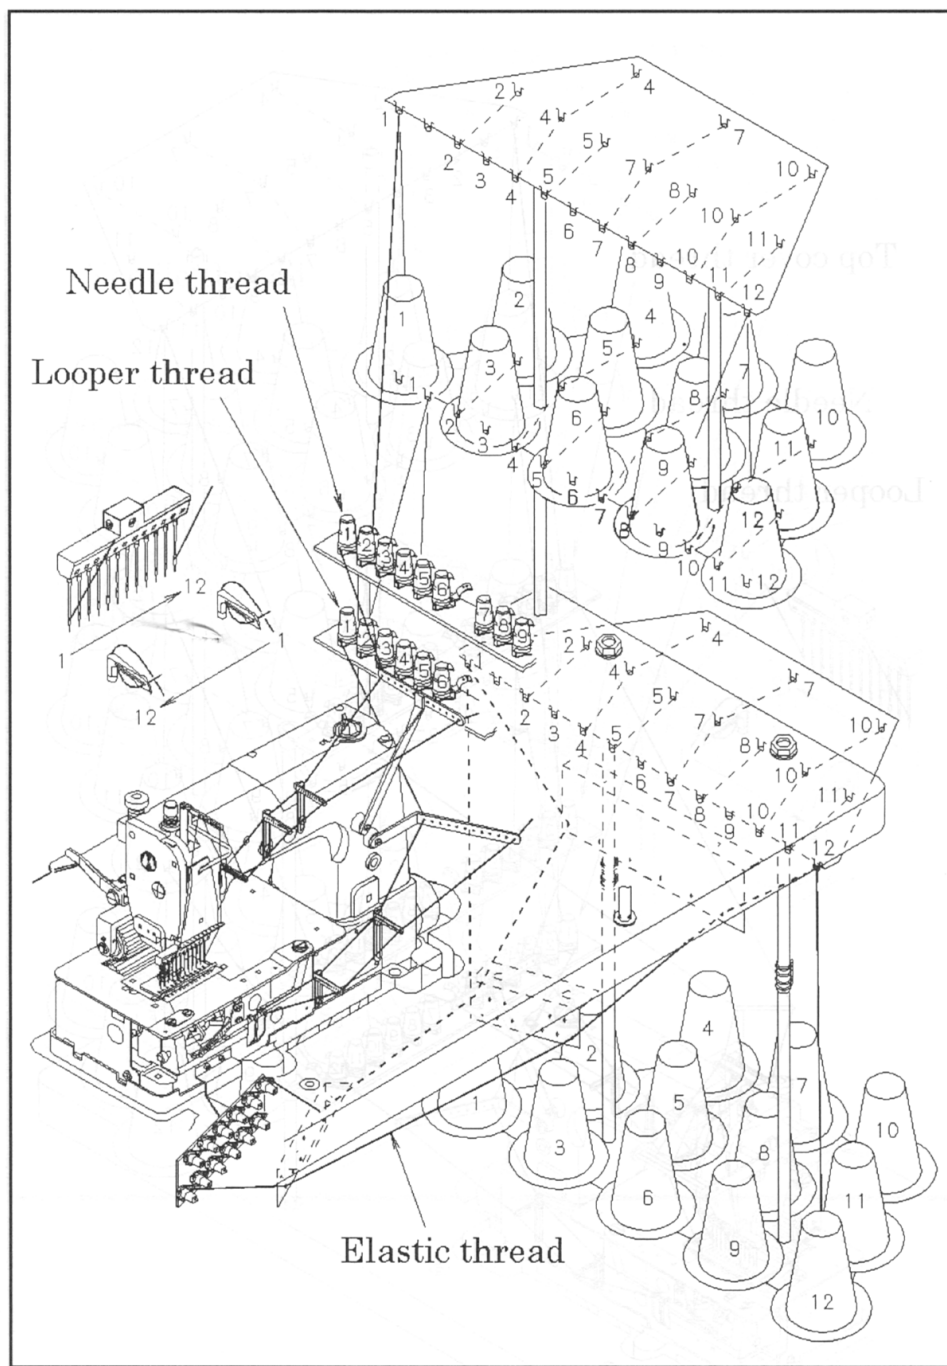

■ Threading diagram for DFB1012

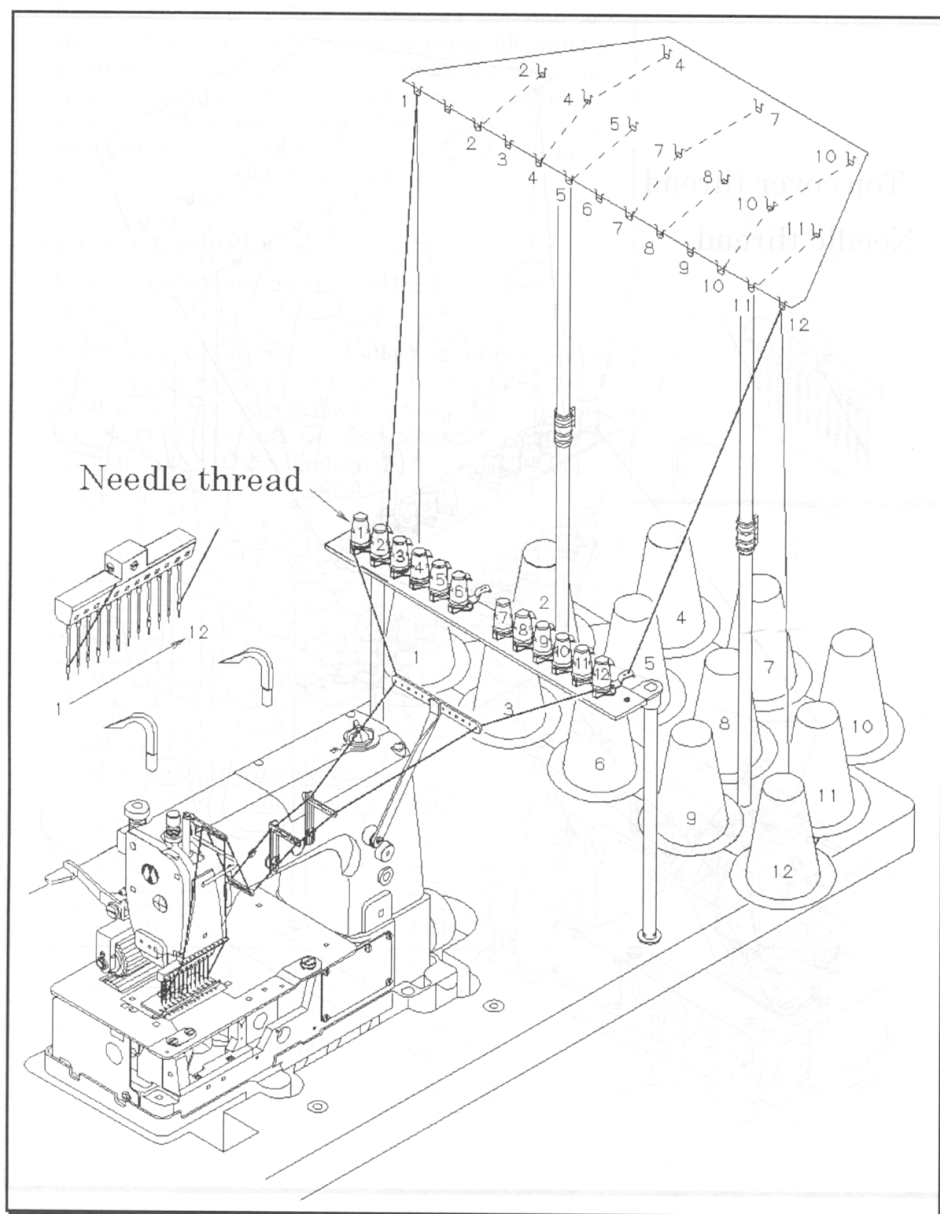


■ Threading diagram for DFB1012PSM

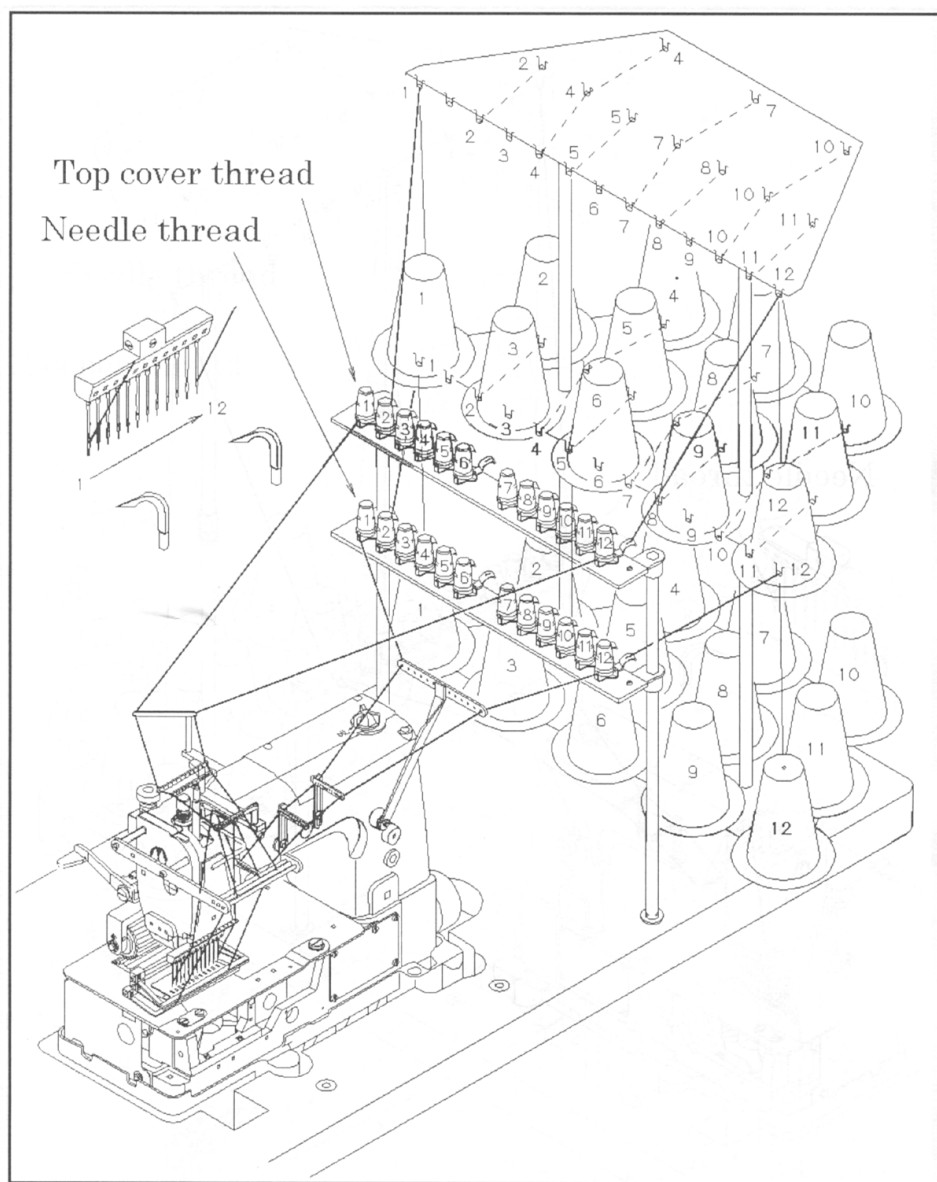

【3】 MACHINE SPEED

3-1 Machine speed & direction in which the machine pulley runs

Refer to the table below for maximum and standard speeds of the Series. To extend machine life, run the machine approximately 15~20% below the maximum speed for the first 200 hours of operation (approx. 1 month). Then run the machine at the standard speed. The machine pulley turns counterclockwise as seen from the end of the machine pulley.

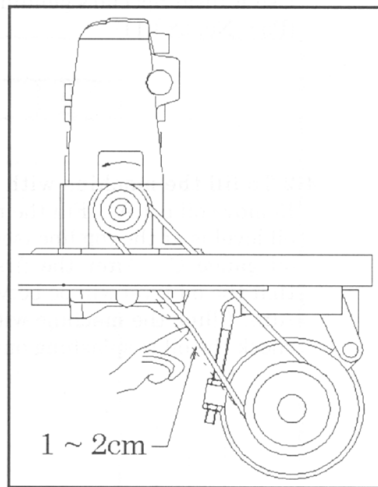

3-2 Motor & belt

Motor : 3-phase, 2-pole, 400W clutch motor

Belt : M type V belt

Select the proper motor pulley according to the machine speed (refer to the motor pulley outer diameter on the table below). Adjust the position of the motor by pressing the finger onto the middle of the belt so that 1~2cm deflection can be achieved (see the illustration on the right).

< Machine speed >

Model	Maximum speed	Standard speed
DFB1404P	4500	4000
DFB1412P	4000	3500

< Motor pulley selection table >

Motor pulley outer diameter (mm)	Machine speed (SPM)	
	50Hz	60Hz
60	3150	2950
70	2300	3450
80	3300	3900
90	3700	4400
100	4100	(4900)
110	4500	(5400)


【4】 LUBRICATION

4-1 Oil

Use Kansai Special's genuine oil.
(Part No. 28-611)

4-2 To fill the machine with oil

Remove oil pot A. Fill the machine with oil until the oil level is at the top line (see H in the illustration) on oil gauge C. After the first lubrication, add oil so that the oil level will be between H and L. After filling the machine with oil, run the machine to check the oil is splashing onto oil pot A.

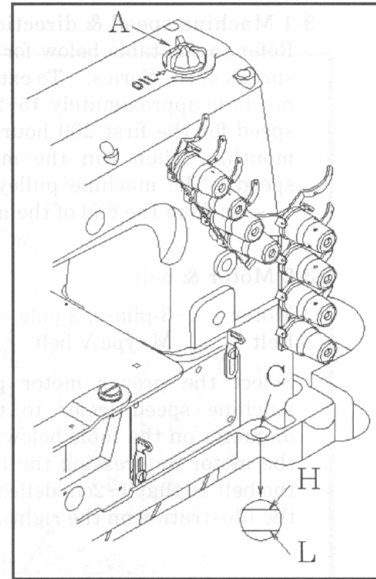


4-3 Replacing the oil and the filter element


To extend machine life, be sure to replace the oil after the first 250 hours of operation.


To replace the oil, follow the procedures below.


1. Remove the V belt from the motor pulley and then remove the machine from the table.
2. Remove screw D and then drain the oil.
Be careful not to stain V belt with the oil.
3. After draining the oil, be sure to tighten screw D.
4. Fill the machine with oil by referring to 4-2 shown above.

If filter element E is contaminated, proper oiling may not be performed. Clean the filter element every six months. If just a little or no oil flows out from the nozzle with the proper amount of oil in the machine, check the filter element. To clean the filter element, remove oil filter cap F.

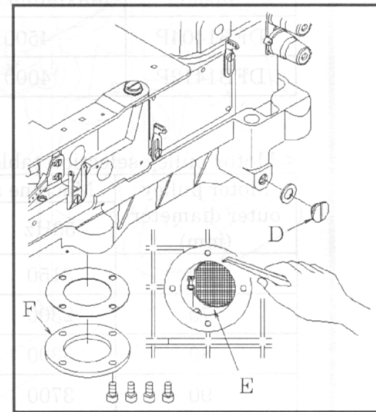


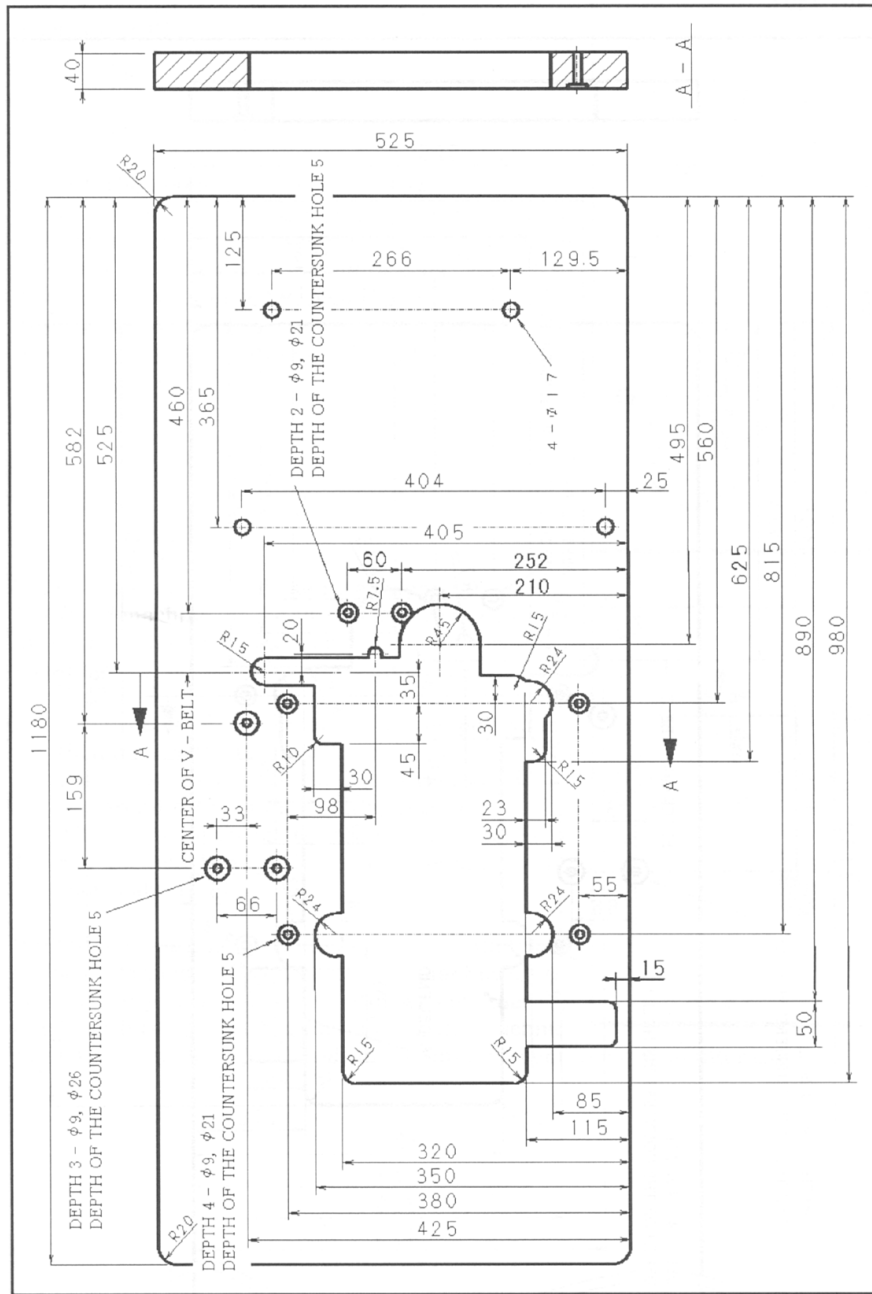

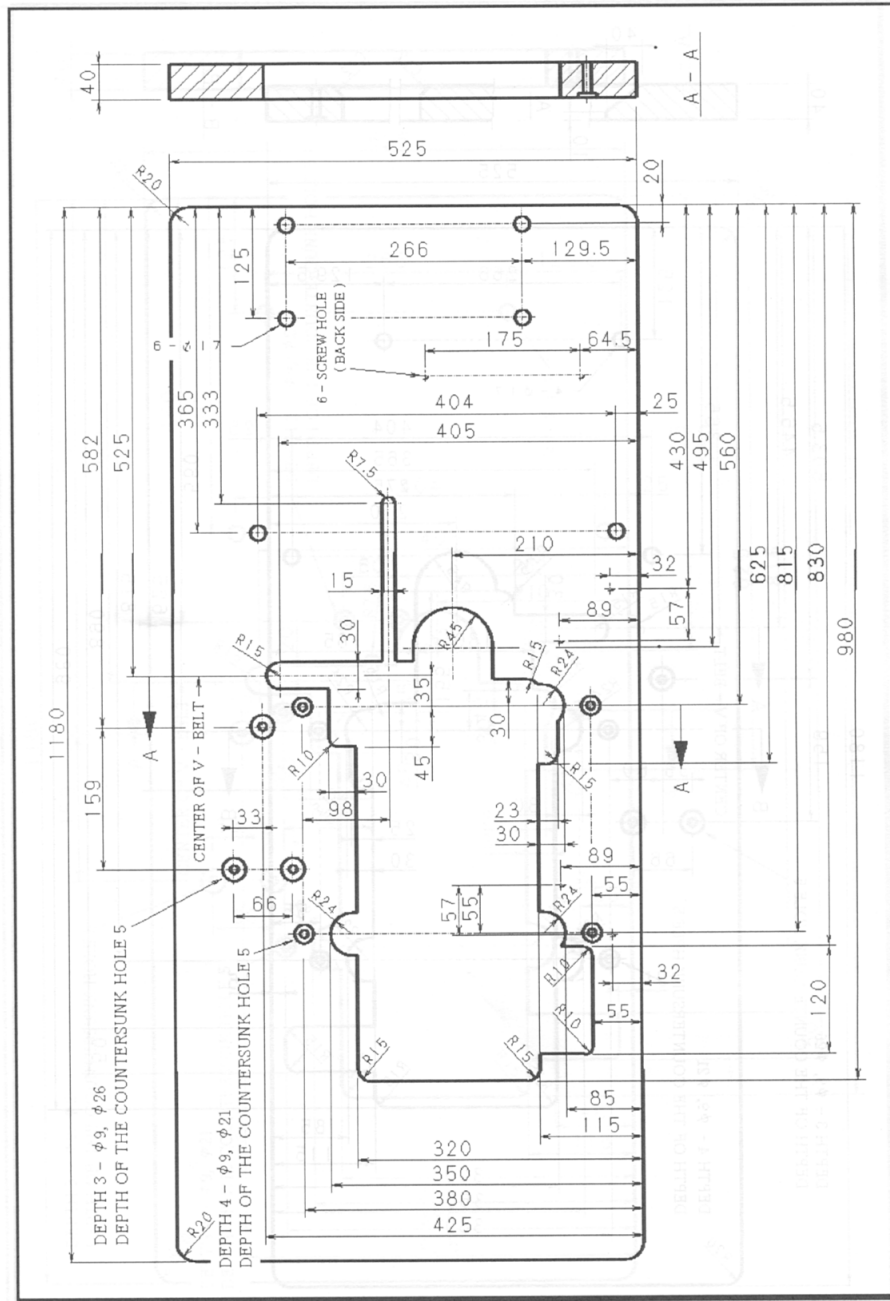



5-2 How to install the machine


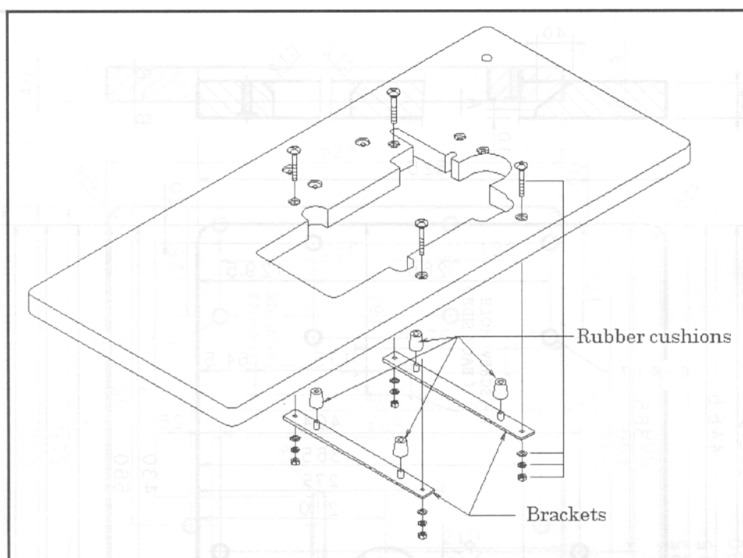


【6】TIMING OF THE LOOPER TO THE NEEDLES

6-1 Angle for installing the looper and position of the looper holder bracket

Insert the looper into the looper holder until bottom A of the looper touches looper holder bracket B. Then tighten screw C.

When the looper passes the needle, there should be a clearance of 0~0.1mm between the point of the looper and the scarf of the needle. Adjustment is made by loosening screw D and moving the looper holder bracket left or right.

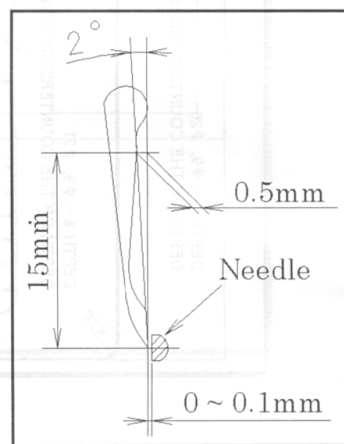
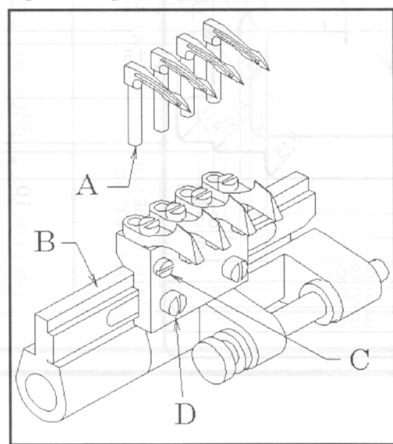


6-2 Looper left-to-right movement

When the looper passes the needle, the point of the looper, moving to the right, should be 1.5mm above the top of the needle's eye. When the looper passes the needle, the point of the looper, moving to the left, should be 3mm above the top of the needle's eye.


- For single chainstitching, when the looper enters the needle thread loop, the point of the looper should be 4mm above the top of the needle's eye.

- To make this adjustment, remove the cover first, loosen eccentric set screw D and then move eccentric ball A.

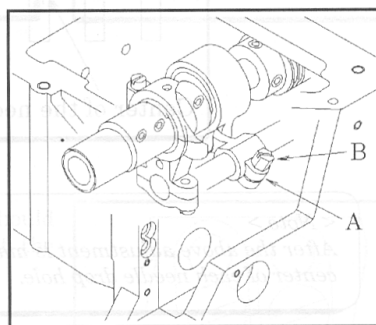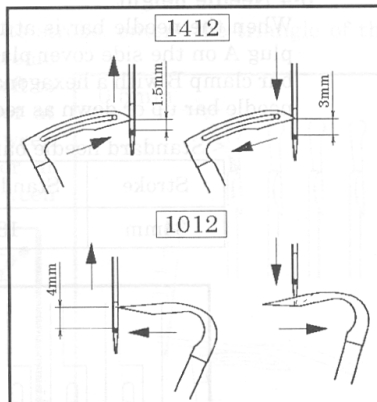


6-3 Looper setting distance

When the needle bar is at the bottom of its stroke, set the distance from the point of the looper to the center of the needle should be 3mm.

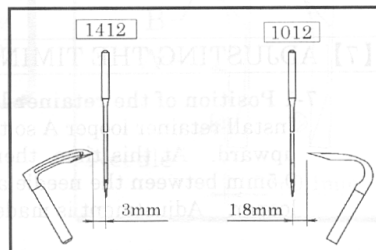

- Adjustment is made by removing the cover and loosening screw B on looper front-to-back lever A.


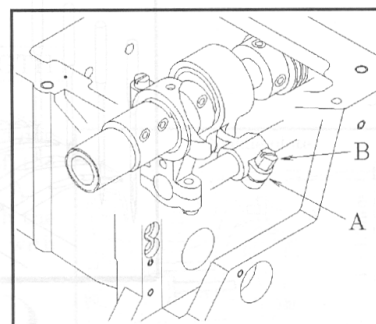


6-4 Needle height

When the needle bar is at the top of its stroke, remove plug A on the side cover plate, loosen screw C on needle bar clamp B with a hexagonal wrench and then move the needle bar up or down as required.

< Standard needle bar height D >

Stroke	Standard model
34mm	13.5mm

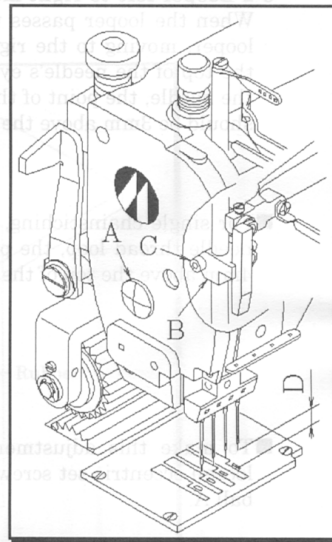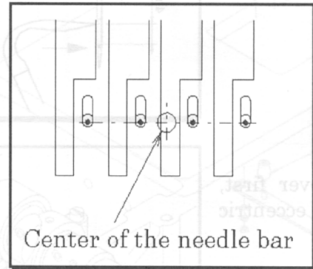



< Note >

After the above adjustment is made, check to make sure each needle drops correctly into the center of each needle drop hole.

【7】 ADJUSTING THE TIMING OF THE RETAINER LOOPER



7-1 Position of the retainer looper

Install retainer looper A so that its flat surface is turned upward. At this time, there should be a clearance of 0.5mm between the needle and the point of the retainer looper. Adjustment is made by loosening B.

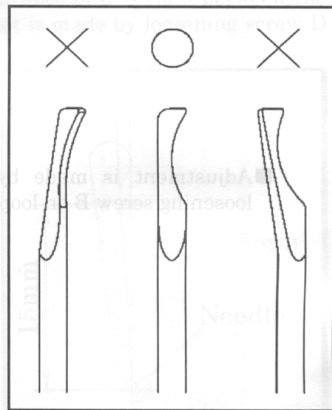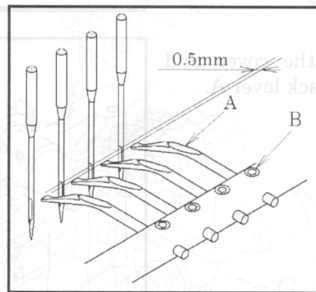

7-2 Timing of the retainer loop to the needle

When the needle, moving from the top to bottom of its stroke, enters the triangle of the looper thread, the retainer looper should be at the extreme right end of its travel. To adjust the retainer looper left to right, loosen screws A first. With the retainer looper at the extreme left end of its travel, set the clearance between the retainer looper and the right side of the looper at approximately 0.5mm. Then set the clearance between the retainer looper and the top surface of the looper blade at 0.1mm. After this adjustment is made, tighten screws A.

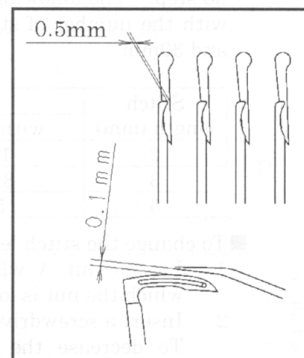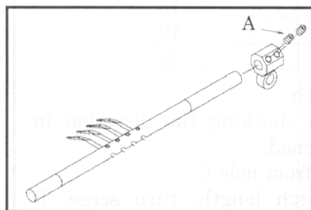

【8】 ADJUSTING THE NEEDLE GUARD


8-1 Position of the needle guard

When the needle is closest to the needle guard, there should be a clearance 0~0.1mm between the right side of the needle and needle guard A.

Adjustment is made by loosening screw B.

< Note >

To adjust the standard type of needle guard, after positioning the looper holder bracket (see 6-1) adjust the looper by loosening the looper set screw. Then tighten screw B.

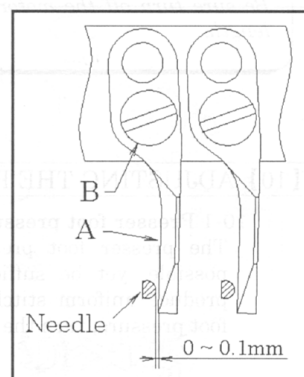


【9】 ADJUSTING THE FEED DOG & STITCH LENGTH

9-1 Feed dog height & tilt

When the needle bar is at the top of its stroke, the feed dog teeth should be 1~1.2mm above the top surface of the needle plate. Adjustment is made by loosening screw A. Then check to see if the feed dog teeth is parallel with the top surface of the needle plate. Adjustment is made with screws B and C.

< Note >

When adjusting the height of the feed dog, tilt the looper holder toward the front of the machine.

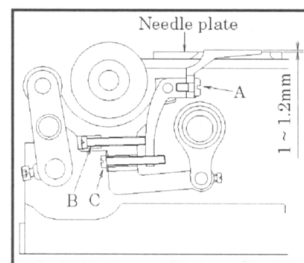


9-2 Stitch length

The stitch length can be adjusted from 2 to 5mm with no step. The following table shows the stitch length with the number of stitches within 1 inch (25.4mm) and 30mm.

Stitch length (mm)	No. of stitches	
	within 1"	within 30mm
2	13	15
3	8.5	10
5	5	6

■ To change the stitch length

1. Loosen nut A while checking the direction in which the nut is loosened.
2. Insert a screwdriver from hole C.
To decrease the stitch length, turn screw B clockwise. To increase the stitch length, turn screw B counterclockwise.
3. After this adjustment is made by turning screw B, be sure to tighten screw A.

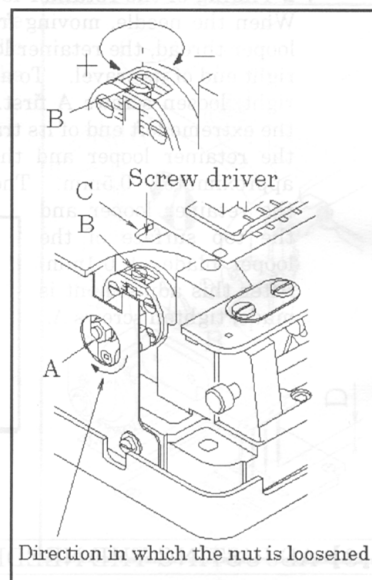


< Note >

Be sure turn off the motor when changing the stitch length.

【10】 ADJUSTING THE PRESSER FOOT

10-1 Presser foot pressure

The presser foot pressure should be as light as possible, yet be sufficient to feed the fabric and produce uniform stitches. To increase the presser foot pressure, turn the adjusting knob clockwise.

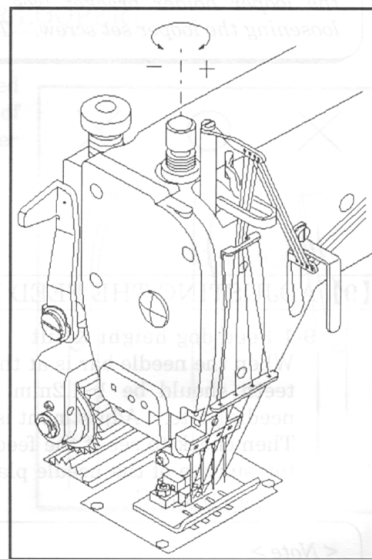


10-2 Position of the presser foot

Fit the presser foot onto the presser bar so that the needle can drop correctly to the center of the needle drop hole on the presser foot.

Adjustment is made by loosening screw A.

The left-to-right play adjustment on the presser foot is made by loosening nuts B.

Create a clearance of 0.5mm as shown in the illustration on the right.

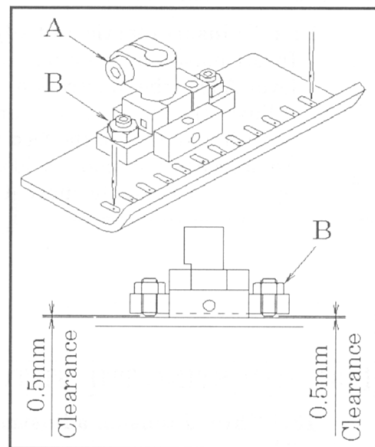

【11】 ADJUSTING THE REAR PULLER DEVICE


11-1 Manual lever

To position or remove the fabric, raise manual lever A.

11-2 To adjust the puller pressure

The puller pressure should be as light as possible, yet be sufficient to feed the fabric smoothly.


To increase the pressure, turn adjusting knob D clockwise. To decrease the pressure, turn adjusting knob D counterclockwise.

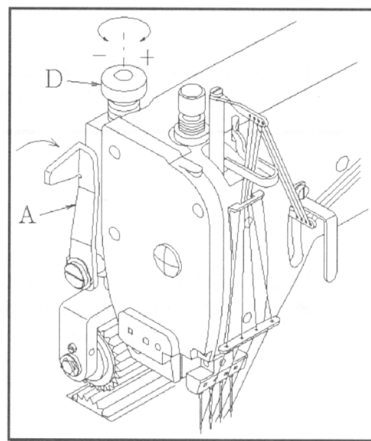

11-3 Adjusting the feeding amount of the rear puller

Adjust the feeding amount of the rear puller according to that of the feed dog.

To increase the amount, loosen nut G and move it to the left. To decrease the amount, move it to the right.

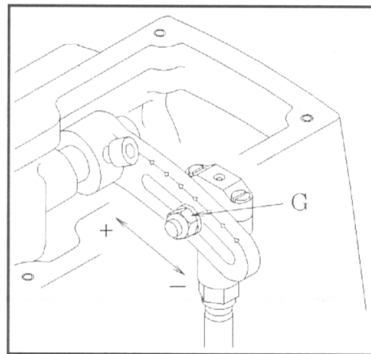


【12】 ADJUSTING THE FRONT PULLER DEVICE

12-1 To insert elastic and adjust the feeding amount of the front puller

Insert elastic by opening/closing small roller C with lever A (see the illustration).

Adjust the feeding amount of the front puller according to that of the feed dog.

To decrease the amount, loosen screw B and move it up. To increase the move it down.

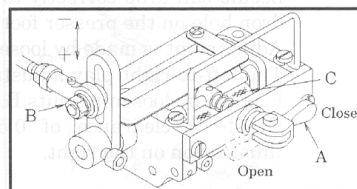


【13】 ADJUSTING THE STITCH FORMATION

13-1 Thread tension adjustment

Thread tension varies according to sewing conditions such as the fabric, thread and stitch length to be used. Tension on the needle thread can be adjusted with nuts A. Tension on the looper thread can be adjusted with nuts B. To increase the tension, turn the nuts clockwise.


< Note >

The tension should be as light as possible, yet be sufficient to produce uniform stitches.

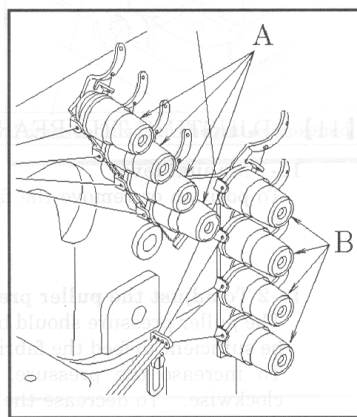

13-2 Position of the needle thread eyelets

- On 1402~1404, secure needle thread eyelet C at the bottom end of the slot.

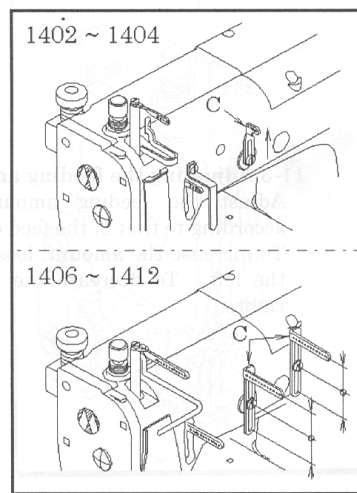

- On 1406~1412, secure needle thread eyelet C at the center of the slot.

< Note >


Adjust the needle thread eyelets according to the thread to be used. To tighten the needle thread, raise the needle thread eyelets.

13-3 Adjusting the needle thread guard

With the needle bar at the bottom of its stroke, the top surface of needle thread guard A should be level and parallel with the centers of the eyes on needle bar eyelet B.

< Note >

Raising needle thread guard A increases the size of the needle thread loop. Lowering needle thread guard A decreases the size of the needle thread loop.


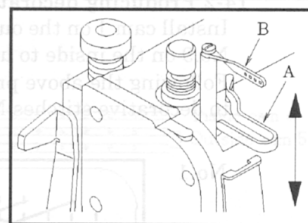


13-4 Position and timing of the looper thread eyelet

When the point of the needle has reached the underside of the looper blade while the needle bar is descending, the looper thread eyelet bar should ascend.

With the looper thread eyelet bar at the bottom of its stroke, adjust distance A between the eye on the looper thread eyelet and the looper thread eyelet bar by referring to the table below.

Thread type	Distance A
Polyester (Tetoron)	8mm
Spun	10mm
Wooly	15mm

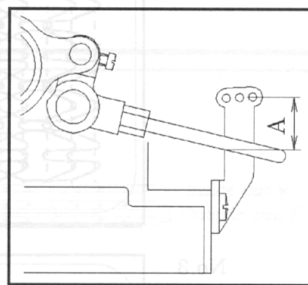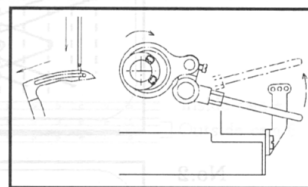

【14】PSM MECHANISM


14-1 Types of cams

There are 9 types of cams from No.1 to No.9 (9 types of standard patterns).

Various kinds of decorative stitches can be produced by a combination of 2 cams.

The inside cam moves the upper spreader.


The outside cam moves the lower two spreaders and crosses spreader threads.

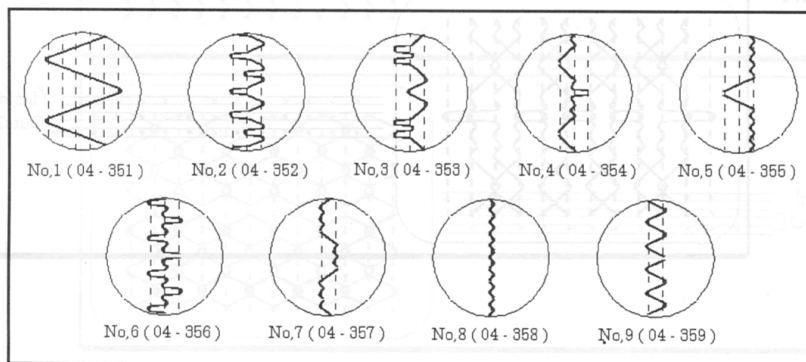


14-2 Producing decorative stitches

Install cam 1 on the outside to use the lower two spreaders. Install any one of cams No.2 to No.9 on the inside to use the upper spreader. Thread spreaders' eyes marked ●. Following the above procedures automatically produces the decorative stitches below (refer to decorative stitches No.2 to No.9).


No.1

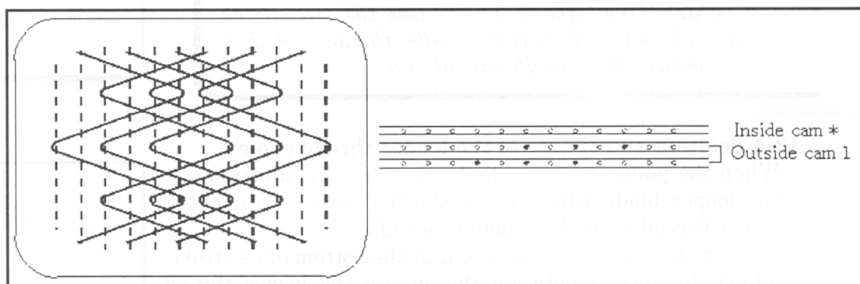


No.2

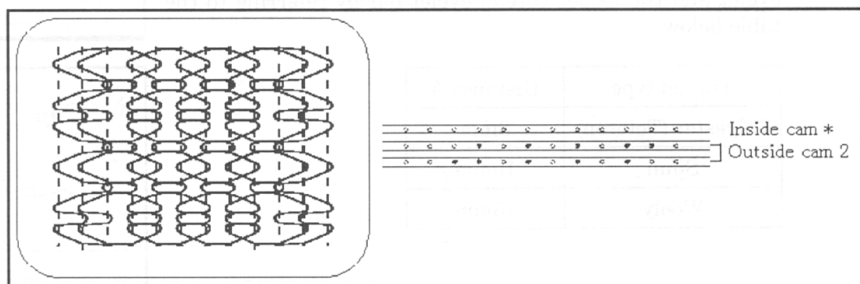


No.3

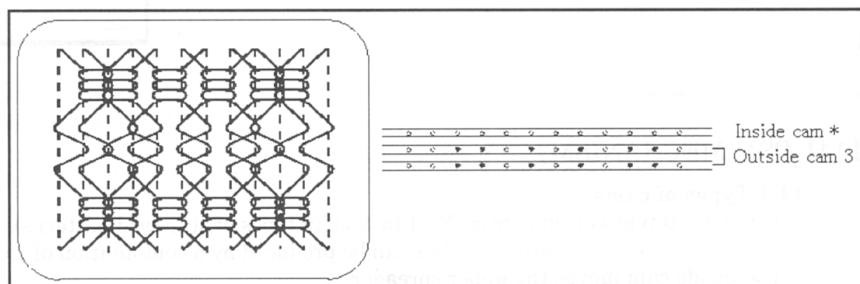


No.4

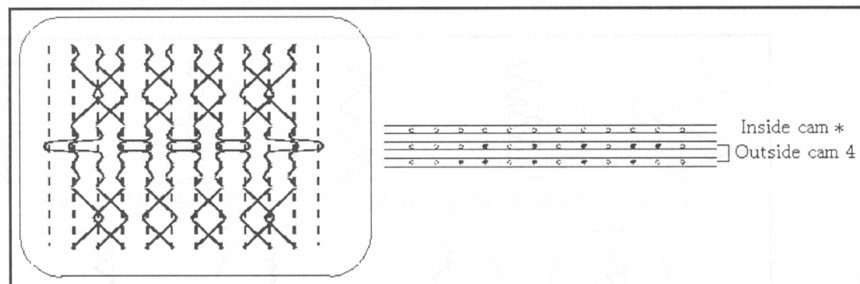


No.5

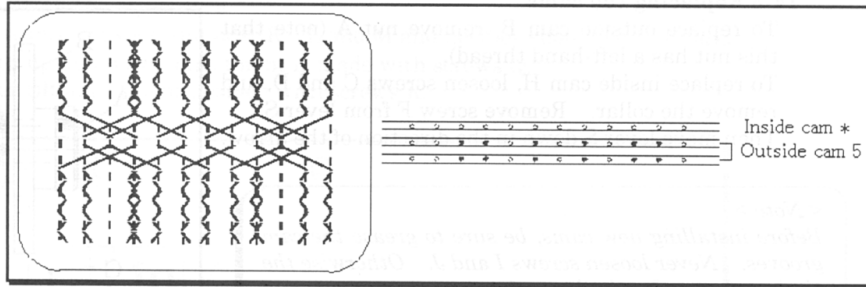


No.6

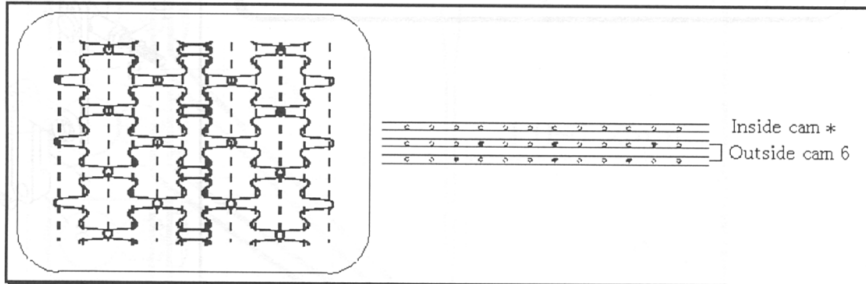


No.7

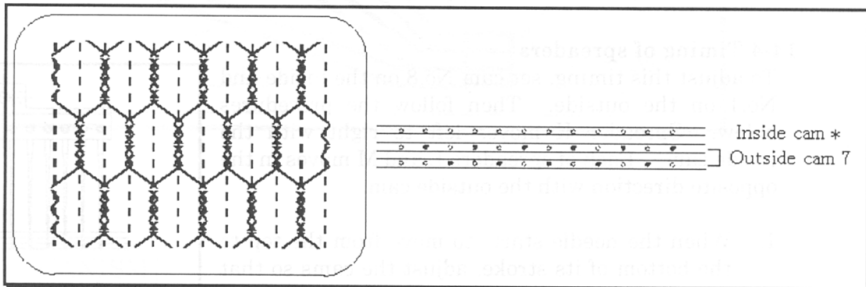

No.8

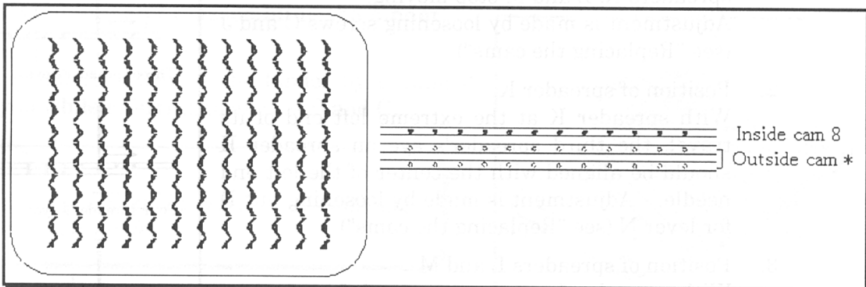

No.9

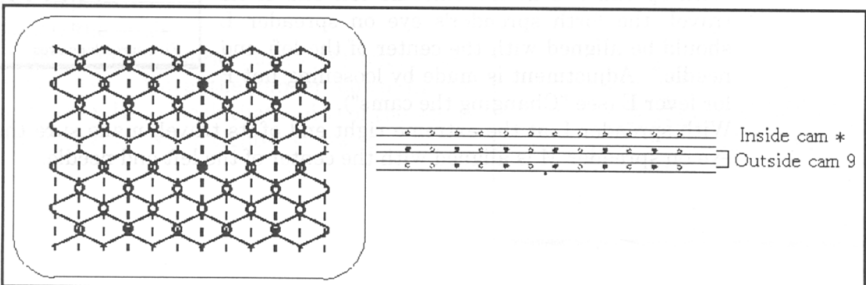

14-3 Replacing the cams


To replace outside cam B, remove nut A (note that this nut has a left-hand thread).

To replace inside cam H, loosen screws C and D, and remove the collar. Remove screw F from lever S.

Then move lever S down in the direction of the arrow.

< Note >

Before installing new cams, be sure to grease the cam grooves. Never loosen screws I and J. Otherwise the timing of spreaders is changed.

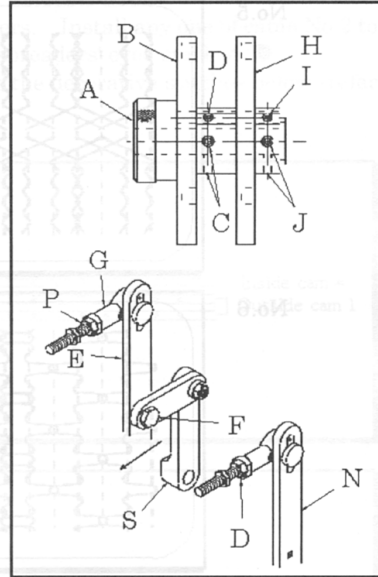

14-4 Timing of spreaders

To adjust this timing, set cam No.8 on the inside and No.1 on the outside. Then follow the procedures below. Spreader K moves left to right with the inside cam. Each of spreaders L and M moves in the opposite direction with the outside cam.

1. When the needle starts to move from the top to the bottom of its stroke, adjust the cams so that spreaders K, L and M stop moving.

Adjustment is made by loosening screws C and J (see "Replacing the cams").


2. Position of spreader K

With spreader K at the extreme left end of its travel, the third spreader's eye on spreader K should be aligned with the center of the left end needle. Adjustment is made by loosening nut D for lever N (see "Replacing the cams").

3. Position of spreaders L and M

With spreader L at the extreme left end of its travel, the forth spreader's eye on spreader L should be aligned with the center of the left end needle. Adjustment is made by loosening nut P for lever E (see "Changing the cams").

With spreader L at the extreme right end of its travel, make sure the fifth spreader's eye on spreader M is aligned with the center of the left end needle.

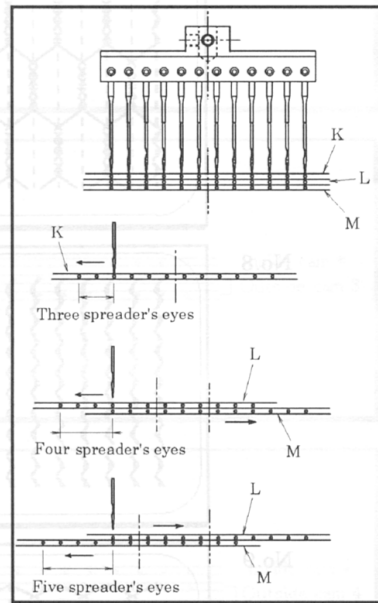


14-5 Adjusting the spreaders

The clearance between spreader K, L and M and needles should be 1~1.2mm.

Spreader up-and-down adjustment is made with screws Q.

Spreader tilt adjustment is made with screws R.

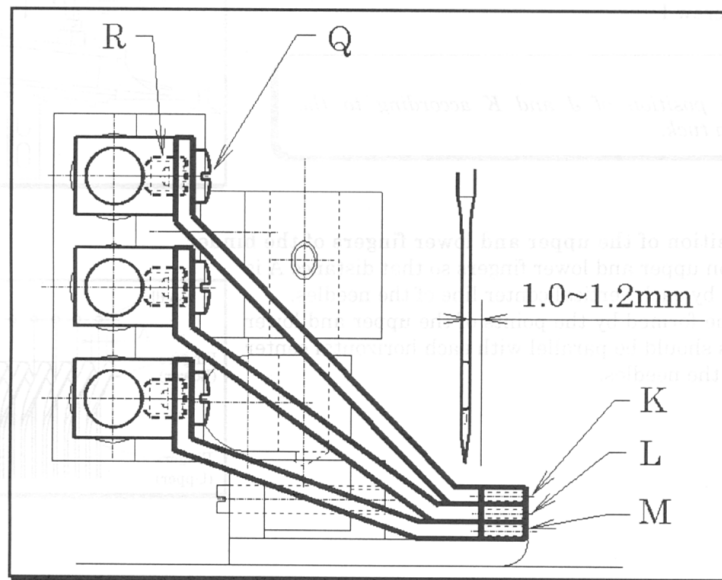

【15】 PTV MECHANISM

15-1 Disassembling and reassembling the binder

■ To disassemble the binder


Remove screw A. Remove the binder by pulling it toward you while referring to arrows B and C.

< Note >

When removing the binder, be careful not to damage the ends of the fabric guides.

■ To reassemble the binder

Fit the ends of upper fabric guides (F) onto lower fabric guides (G). Move the binder down in the direction of arrow H. Check that end D of the screw touches the bracket. Then tighten screw A.

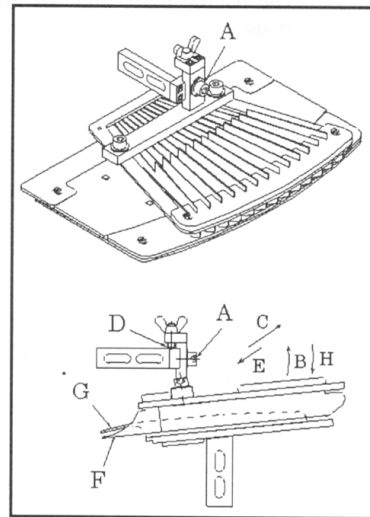


15-2 Adjusting the binder up and down

Adjust the binder up and down according to the fabric to be used. Adjustment is made by loosening screw A and wing screw I and turning screw D as required. After this adjustment is made, tighten screw A and wing screw I.

< Note >


Adjust the position of J and K according to the finished pin tuck.

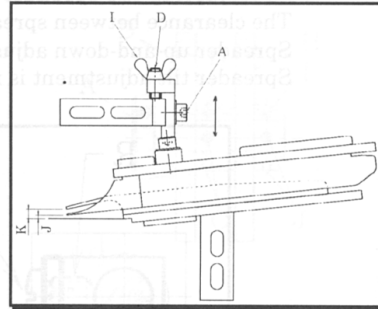

15-3 Position of the upper and lower fingers of the binder

Position upper and lower fingers so that distance A is halved by each vertical center line of the needles.

The line formed by the points of the upper and lower fingers should be parallel with each horizontal center line of the needles.

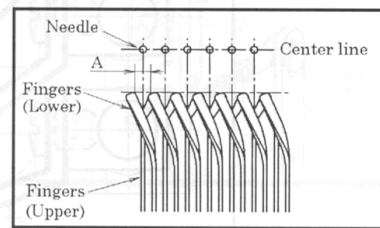

【16】 CLEANING THE MACHINE

At the end of each day, remove the presser foot and the needle plate and then clean the slots of the needle plate and the area around the feed dogs.

